BlueWave® AX-550 Glass Replacement Instructions

1. Before starting, disconnect power to the unit.

2. Remove door retaining screws. Using the supplied allen wrench (2.5 mm), remove the two screws holding the door.

Remove screw
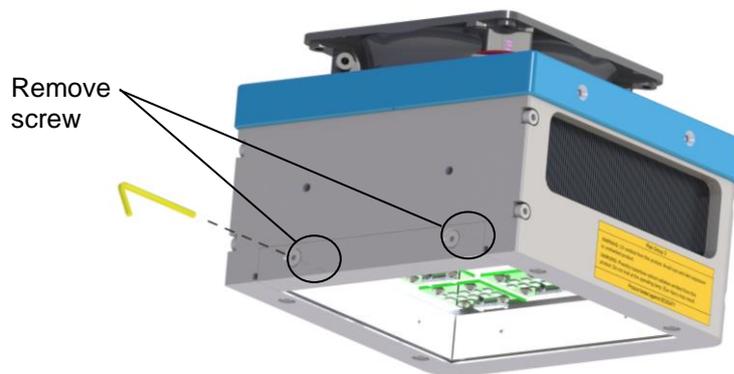
3. Remove door and seal.

Door
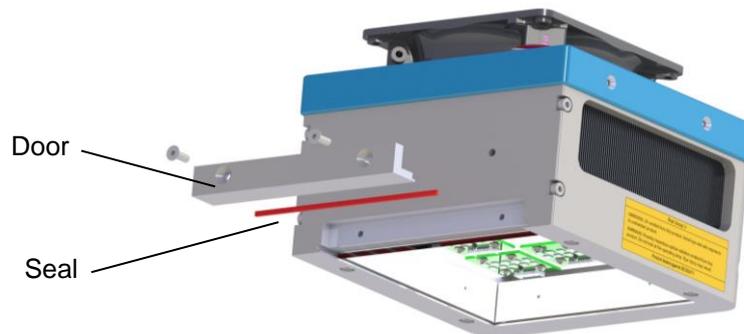
Seal

4. Remove the glass plate by sliding out.

   NOTE: If the old glass window has shattered, be sure to remove all debris before attempting to install the new glass window.

Glass Plate
#42273
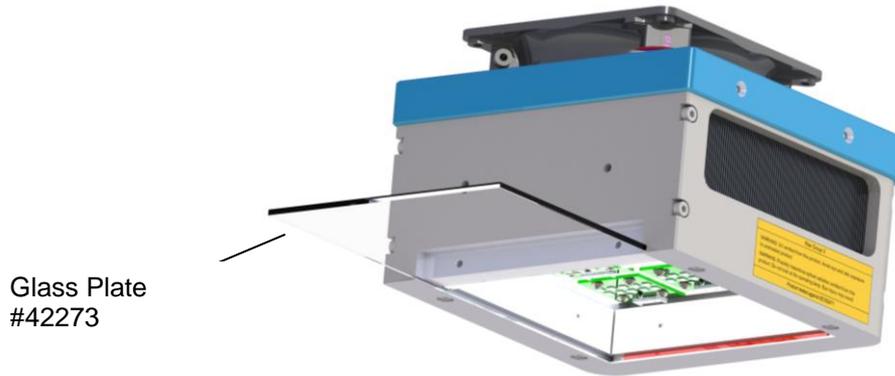
5. Remove seal and replace with a new one.

Seal
#43292
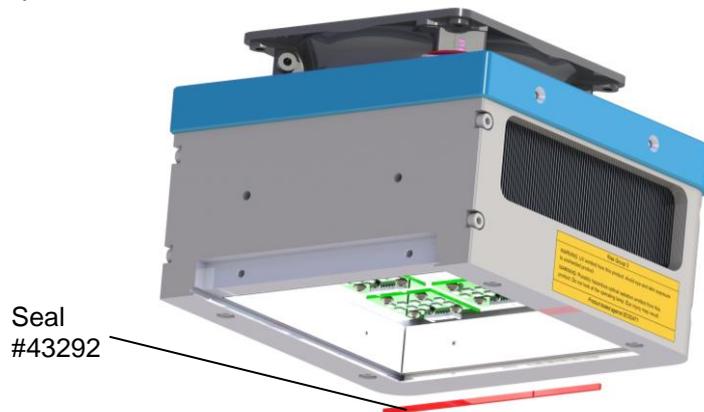
6. Wearing vinyl or cotton gloves, unwrap the new glass window and carefully clean it with the enclosed alcohol swab. Take care not to touch the glass window with bare hands, as any residue left on the window can adversely affect the performance of the unit.

7. Slide new window into place.

8. Add new seal and secure door in place with 2 screws that were removed in step 1.

9. Ensure glass is clean after install. Use alcohol wipe included to care for glass as needed.